




# Panasonic KX-TG6021M Button Pad Replacement

This guide will show you how to replace the button pad on the Panasonic KX-TG6021M. .

Written By: Leah Meador

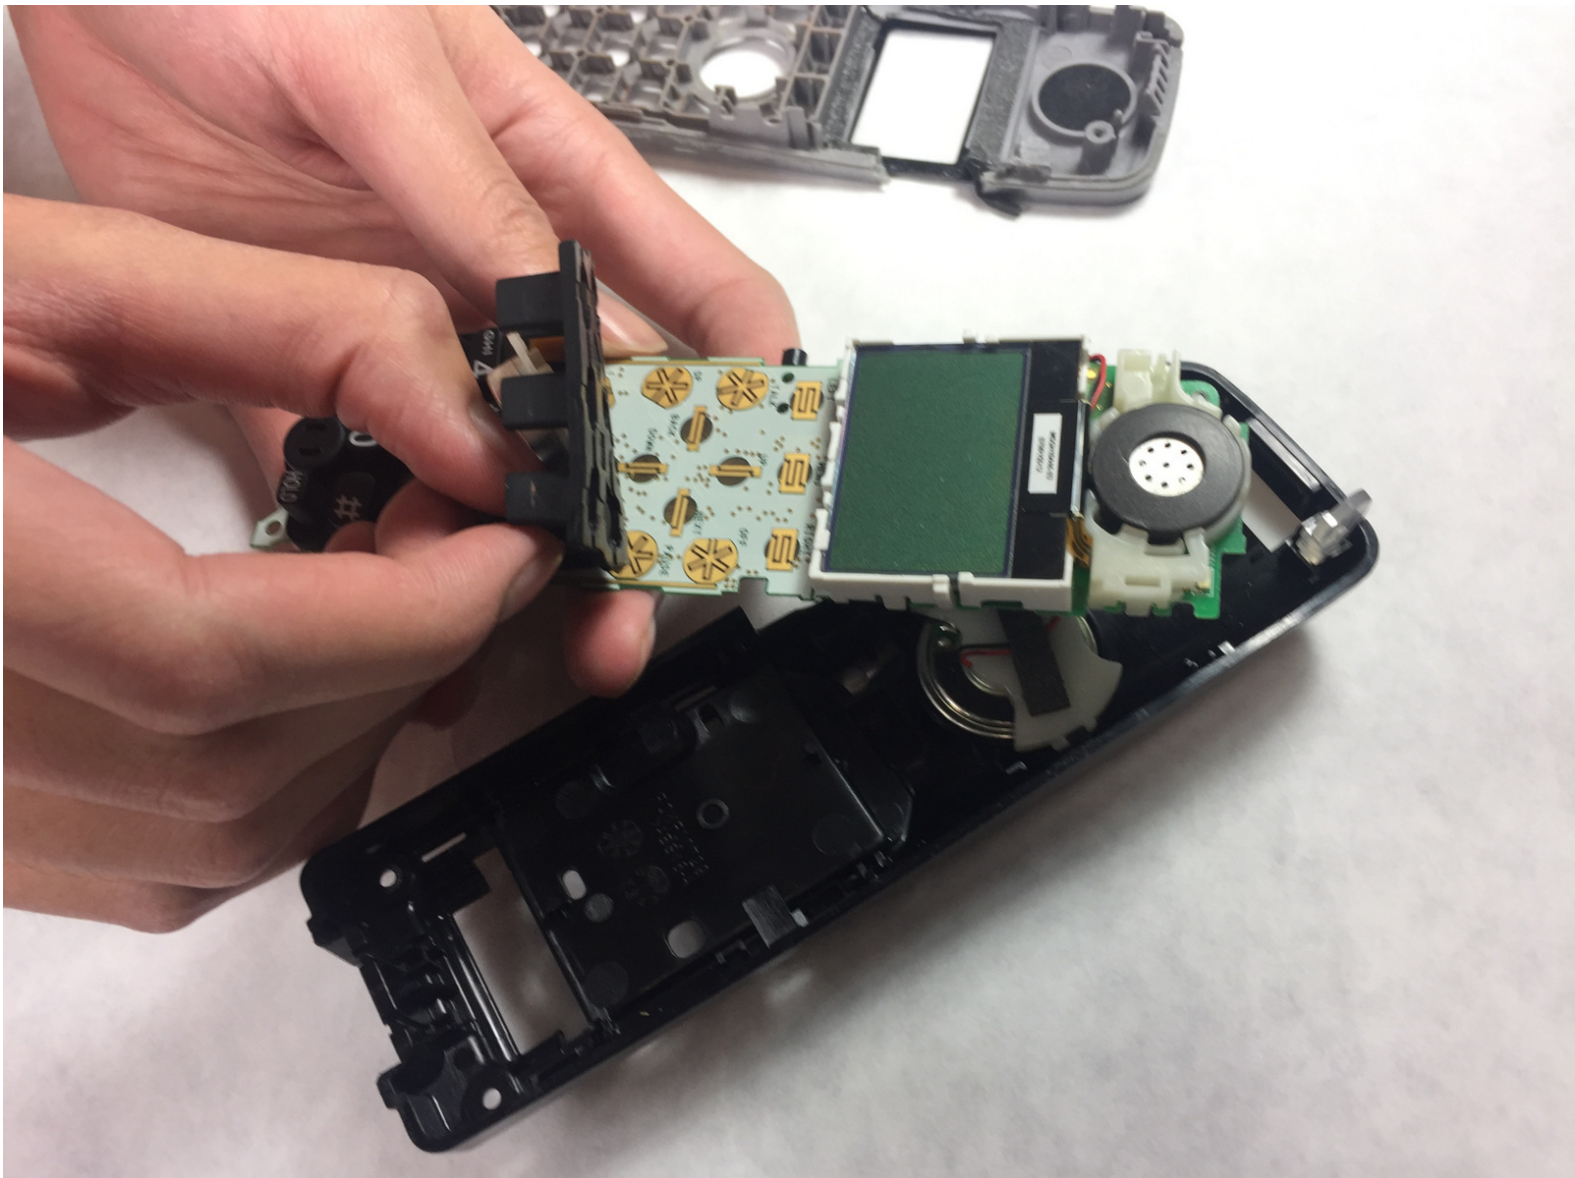

## INTRODUCTION

This guide will show you how to replace the button pad on the Panasonic KX-TG6021M.

## Step 1 — Battery



- Slide the back cover down towards the bottom of the phone to remove.

## Step 2



- Pull the top of the battery towards you to remove it from the phone.




### Step 3 — Replace Phone Face



- Unscrew the two screws located at the bottom of the phone.



**i** Use a PH00 Phillips head to remove the 9 mm screws.

### Step 4

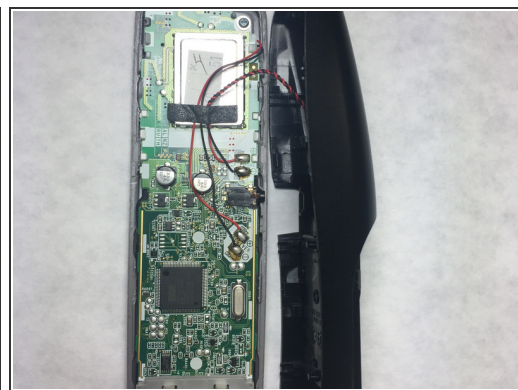


- Separate the back cover from the front cover by using a wedge.
- Remove the back cover from the front cover by pulling them apart.

## Step 5

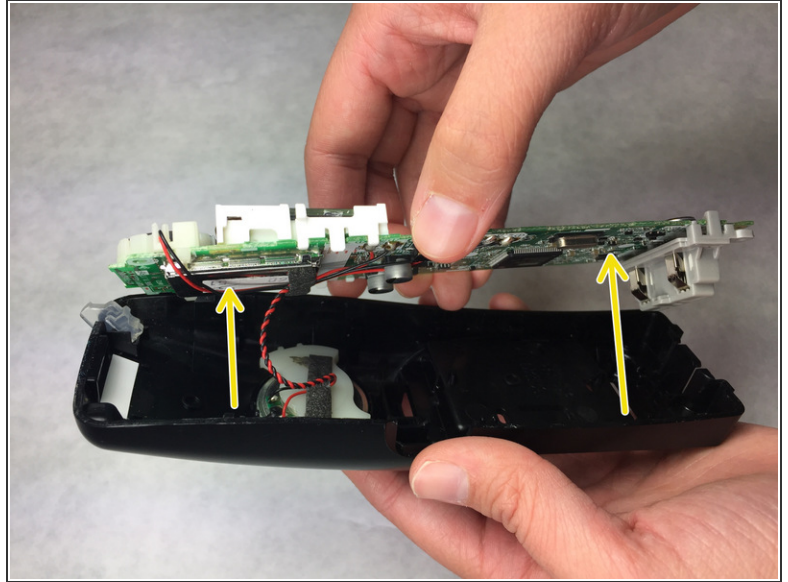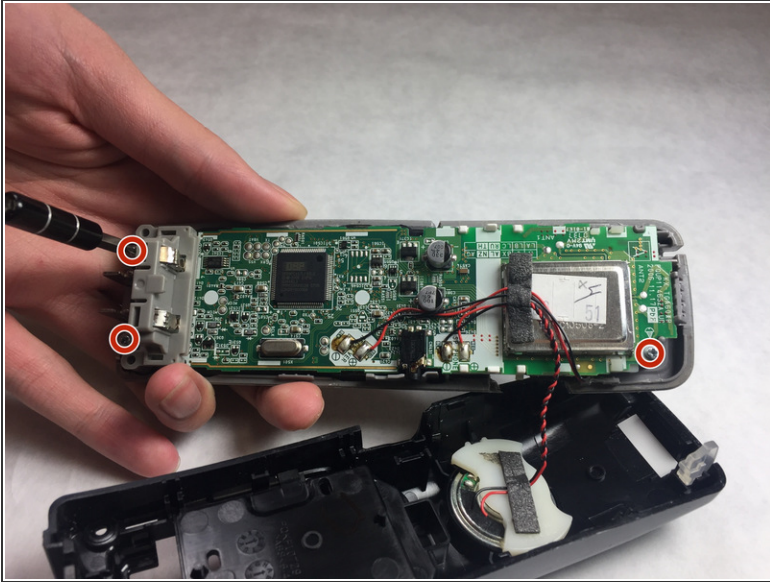

- Unscrew the three screws on the circuit board to remove it from the phone.
- Pull up and out to remove the circuit board from the back phone case.

## Step 6 — Button Pad

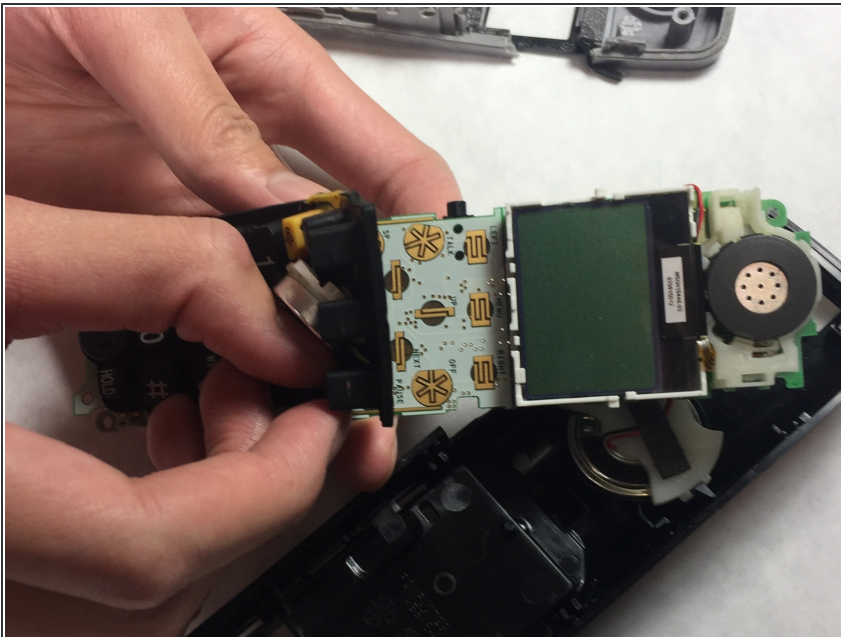

- Remove the button pad.

To reassemble your device, follow these instructions in reverse order.

